

# Configuration of DM48D TV

1. *Basic Steps*
2. *Step1. Setup the automatic start-up with Auto Power on option*
3. *Step2. Setup the Luminosity*
4. *Step3. How to disable function "Maximum Energie Saving "*

**Objective:** Configure the basic settings of your screen like the time and date, the language and other adjustments for better experience, performance and image quality.

## Basic steps

1. Plug the power cable to the TV
2. Press the **Power on** button to open TV
3. A menu will open
  1. Choose **English** and press on the **Enter** button on the remote
  2. Select the orientation and press on the Enter button on the remote
  3. Press Stop to interrupt the automatic network search  
Press **right arrow** and press **Enter**  
Press **skip** button
  4. Press **Down arrow** and select « **no tv(display only)** »
  5. No step 5
  6. Adjust the date by using the keypad of the remote  
Do the same with the time and press on **next** button
  7. Press right arrow and press **next**
  8. Press **ok** button

## **Step1.** Setup the automatic start-up with Auto Power on option

**Objective:** Enable the automatic mode of the TV. When a content is displayed and ends after a set time for example, the TV automatically restarts to continue to display content from another source, ex. from USB stick.

1. Press **Menu** button
2. Select **System** option
3. Select the **Power control** option
4. Go to **Auto Power on** option and select **on**
5. Close the menu with the **Exit** button on the remote

## Step 2. Setup the Luminosity

**Objective:** Select **calibration mode** option so that the TV can try to find the best quality image automatically for your TV. With calibration mode it's possible to adjust manually the backlight.

1. Press **Menu** button
2. Select **Picture tab**
3. Select **Picture Mode** tab
4. Select **Calibration** mode
5. Close the menu with the **Exit** button on the remote

## Step 3. How to disable fonction "Maximum Energie Saving "

**Objective:** Disabling **Maximum Energie Saving** function. When this option is disable, it will get the maximum resources of the TV to have the best performance it can offer.

1. Press **Menu** button
2. Select **System** option
3. Select the **Power control** option
4. Select **Maximum Energy Saving** tab
5. Select **Off**
6. Close the menu by pressing **exit** button on the remote