1/5





LEGEND



Wi-Fi Router To Main Router



Power Cables To Powerbar




Main Router To PC



Main Router To Modem Please send a picture of the installation once done and call Eye-In Media (1-800-890-4213). Also mention the location of the PC (in the admin office? in the kitchen? etc.) And always tie wrap all cables, don't make a mess!


2/5



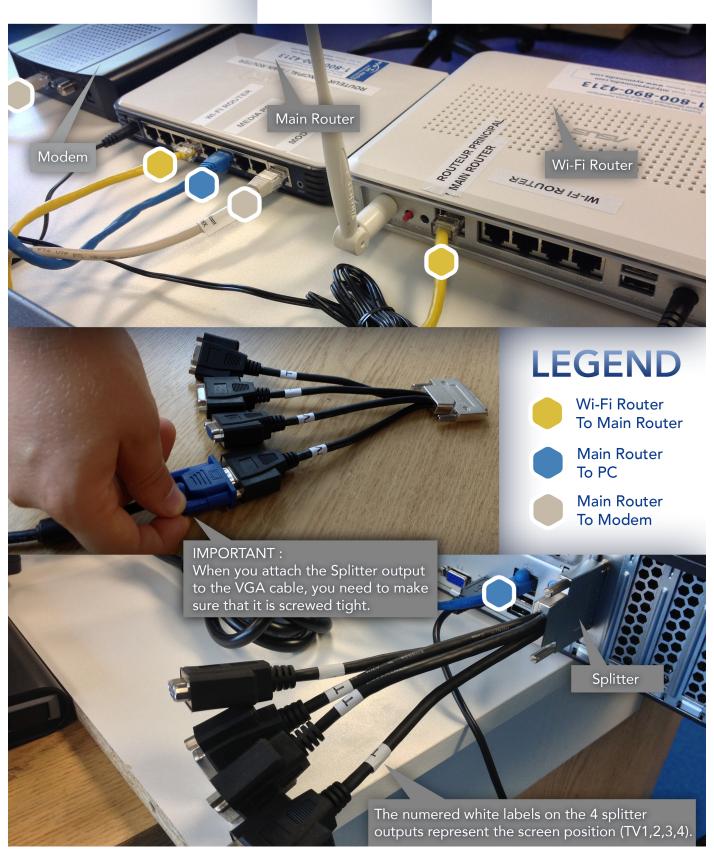

3/5



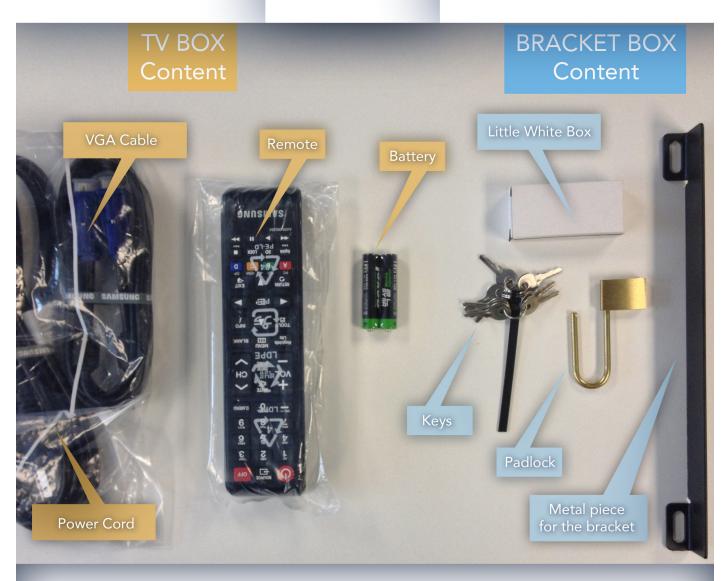


The remote control, the battery, the power cord and the VGA cable are in the same bag, inside the TV Box. ATTENTION: You won't use this 6 ft VGA Cable, but the longer one that we will ship you seperately.


Put the keys in the remote's plastic bag, and put the battery in the remote. Always leave the remote bag (with the remote and keys in it) next to the PC (as seen on the previous page). Find the 2 little white boxes inside the bracket box. Each white box contains a set of keys and one padlock. Open the padlock with a key and keep it open, you'll need it after.

Use the padlock to attach the metal piece to the bracket. It prevents the screen from slipping or falling. The keys must be stored in the remote plastic bag for future use, and placed next to the PC.

PAGE 4/5



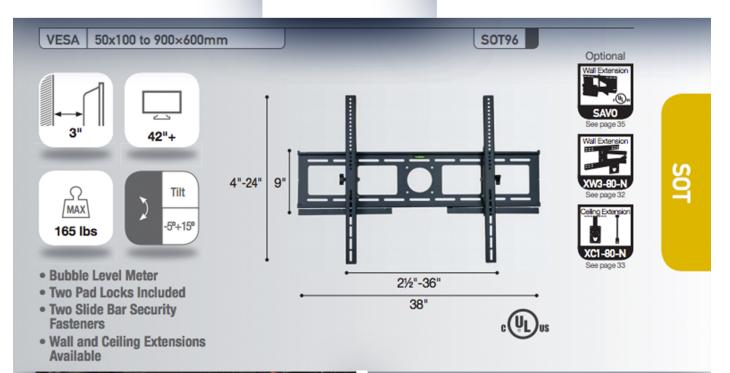

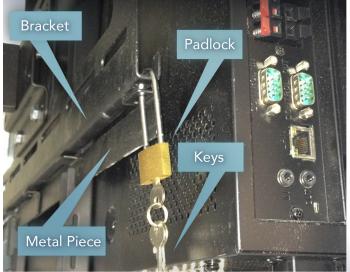

As explained on the previous page, you'll need to open the padlock with the keys found in the two little white boxes that was in the bracket box.

Lock the metal piece on the bracket thanks to the padlock to prevent the screen from slipping or falling (see the picture beside).


Put the keys in the plastic bag of the remote control once the padlock opened and leave the remote next to the PC for future needs (see picture below).







PAGE **5/5**



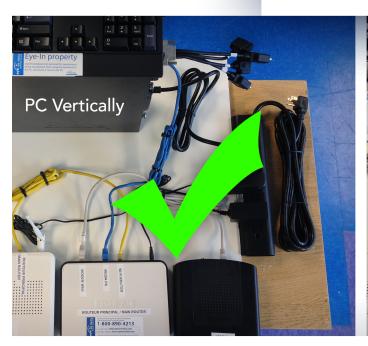

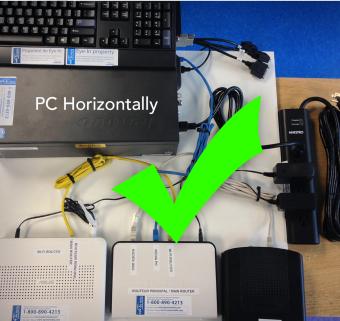



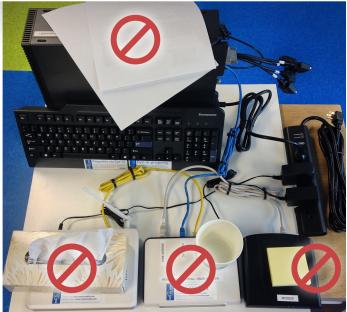

- You can place the PC horizontally or vertically on its side.
- The Wi-Fi router is not mandatory.
- But never put anything on any PC or Modem/Router (papers,etc). And please leave the keyboard (UNPLUGGED) on the PC. Also, please tie wrap all cables to not make a mess.